
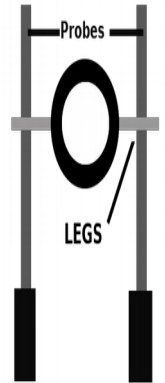
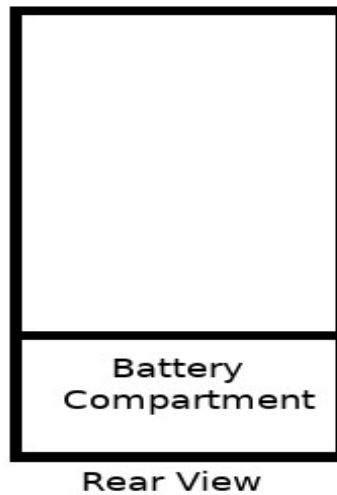


## 432/528 Hertz Generator Micro-Current Technology

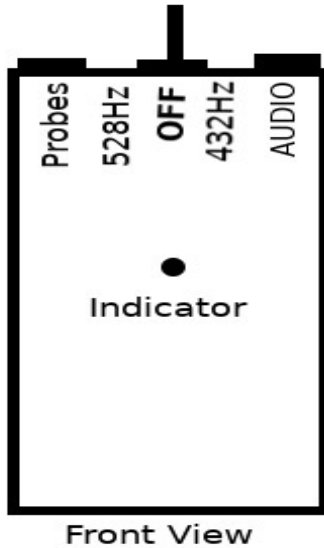

Connecting the Tester  
\* See notes below

### Specification:

432/528Hz modified micro-current waveform output +/- 0.03%  
Size: 124 x 74 x 25  
Weight: Generator - 150g including battery / Probes – 90g  
Battery: 9 volt PM3/PP3 type (not included)  
Probes: ~120 x 6mm copper with 3.5mm jack plug  
Probes Output: 432/528Hz :~1.7VRMS <12mA@9v / 1Kohm DC  
AF Output: @432/528Hz : 1VRMS/1Kohm

### Operation:

Use the toggle switch on top to select 432 or 528Hertz output. Centre position of OFF  
Plug probes into socket on top of generator marker PROBES  
Use switch located on top of generator labelled PWR to turn it ON or OFF.  
The ON position will be indicated by an indicator light on the front to the generator  
The socket labelled AF is an output of 432 or 528Hz that can be connected to an amplifier for audible purposes by using a suitable cable. The AF socket requires a 3.5mm mono jack plug.  
Change battery when indicator light appears dimmer than usual  
To replace battery, slide battery cover (located on rear) downwards. Un-clip the battery and insert the new one. Observe the battery clips polarity.

### Method #1

Hold probes in palms of hands. Turn generator ON  
Maintain position for 30 minutes or as required

### Method #2

With probes on the floor, place both feet over the probes (one probe under each foot).  
Maintain position for 30 minutes or as required

Further useful information on 432 and 528 Hertz as well as Schumann and other Frequencies can be found on the Internet.

### \* Generator Output Tester

Connect probes and turn generator on. Lay the probes next to each other. Place the two wire legs of the tester onto the probes. If the tester does not illuminate, then rotate the tester and connect to probes again. The tester will light up in one rotational direction only, this is correct. A video clip showing the use of the tester can be found on our website at [www.contact51.com](http://www.contact51.com) – select “Support” and “Using the Output Tester” from the drop-down menu.

**NOTE:** We manufacture equipment and are not practitioners. Use of the generator is entirely the responsibility of the user.